


LSU 30-30-30 INSTALLING

Asphalt Laminated Underlayment

THE TWO BASIC SUB FLOOR INSTALLATION ENVIRONMENTS MUST HAVE SMOOTH, CLEAN, DRY, FLAT AND SOUND SURFACES

WOOD SUB FLOOR

CONCRETE SUB FLOOR

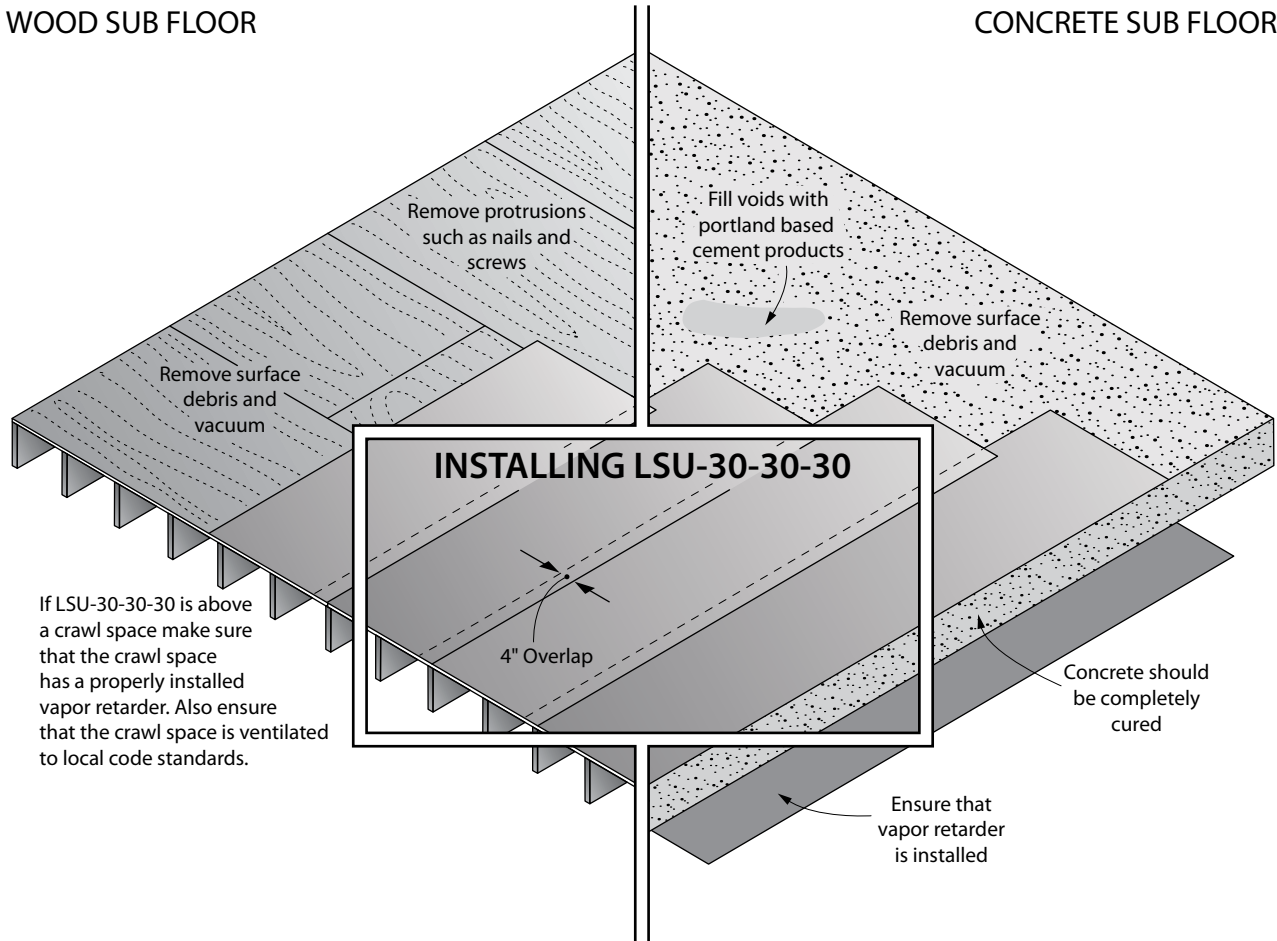

OTHER CONSIDERATIONS

The installer is responsible to see that all local codes and flooring manufacturers requirements are met. For additional detailed information go to the NWFA (National Wood Flooring Association) Web site nwfa.org.